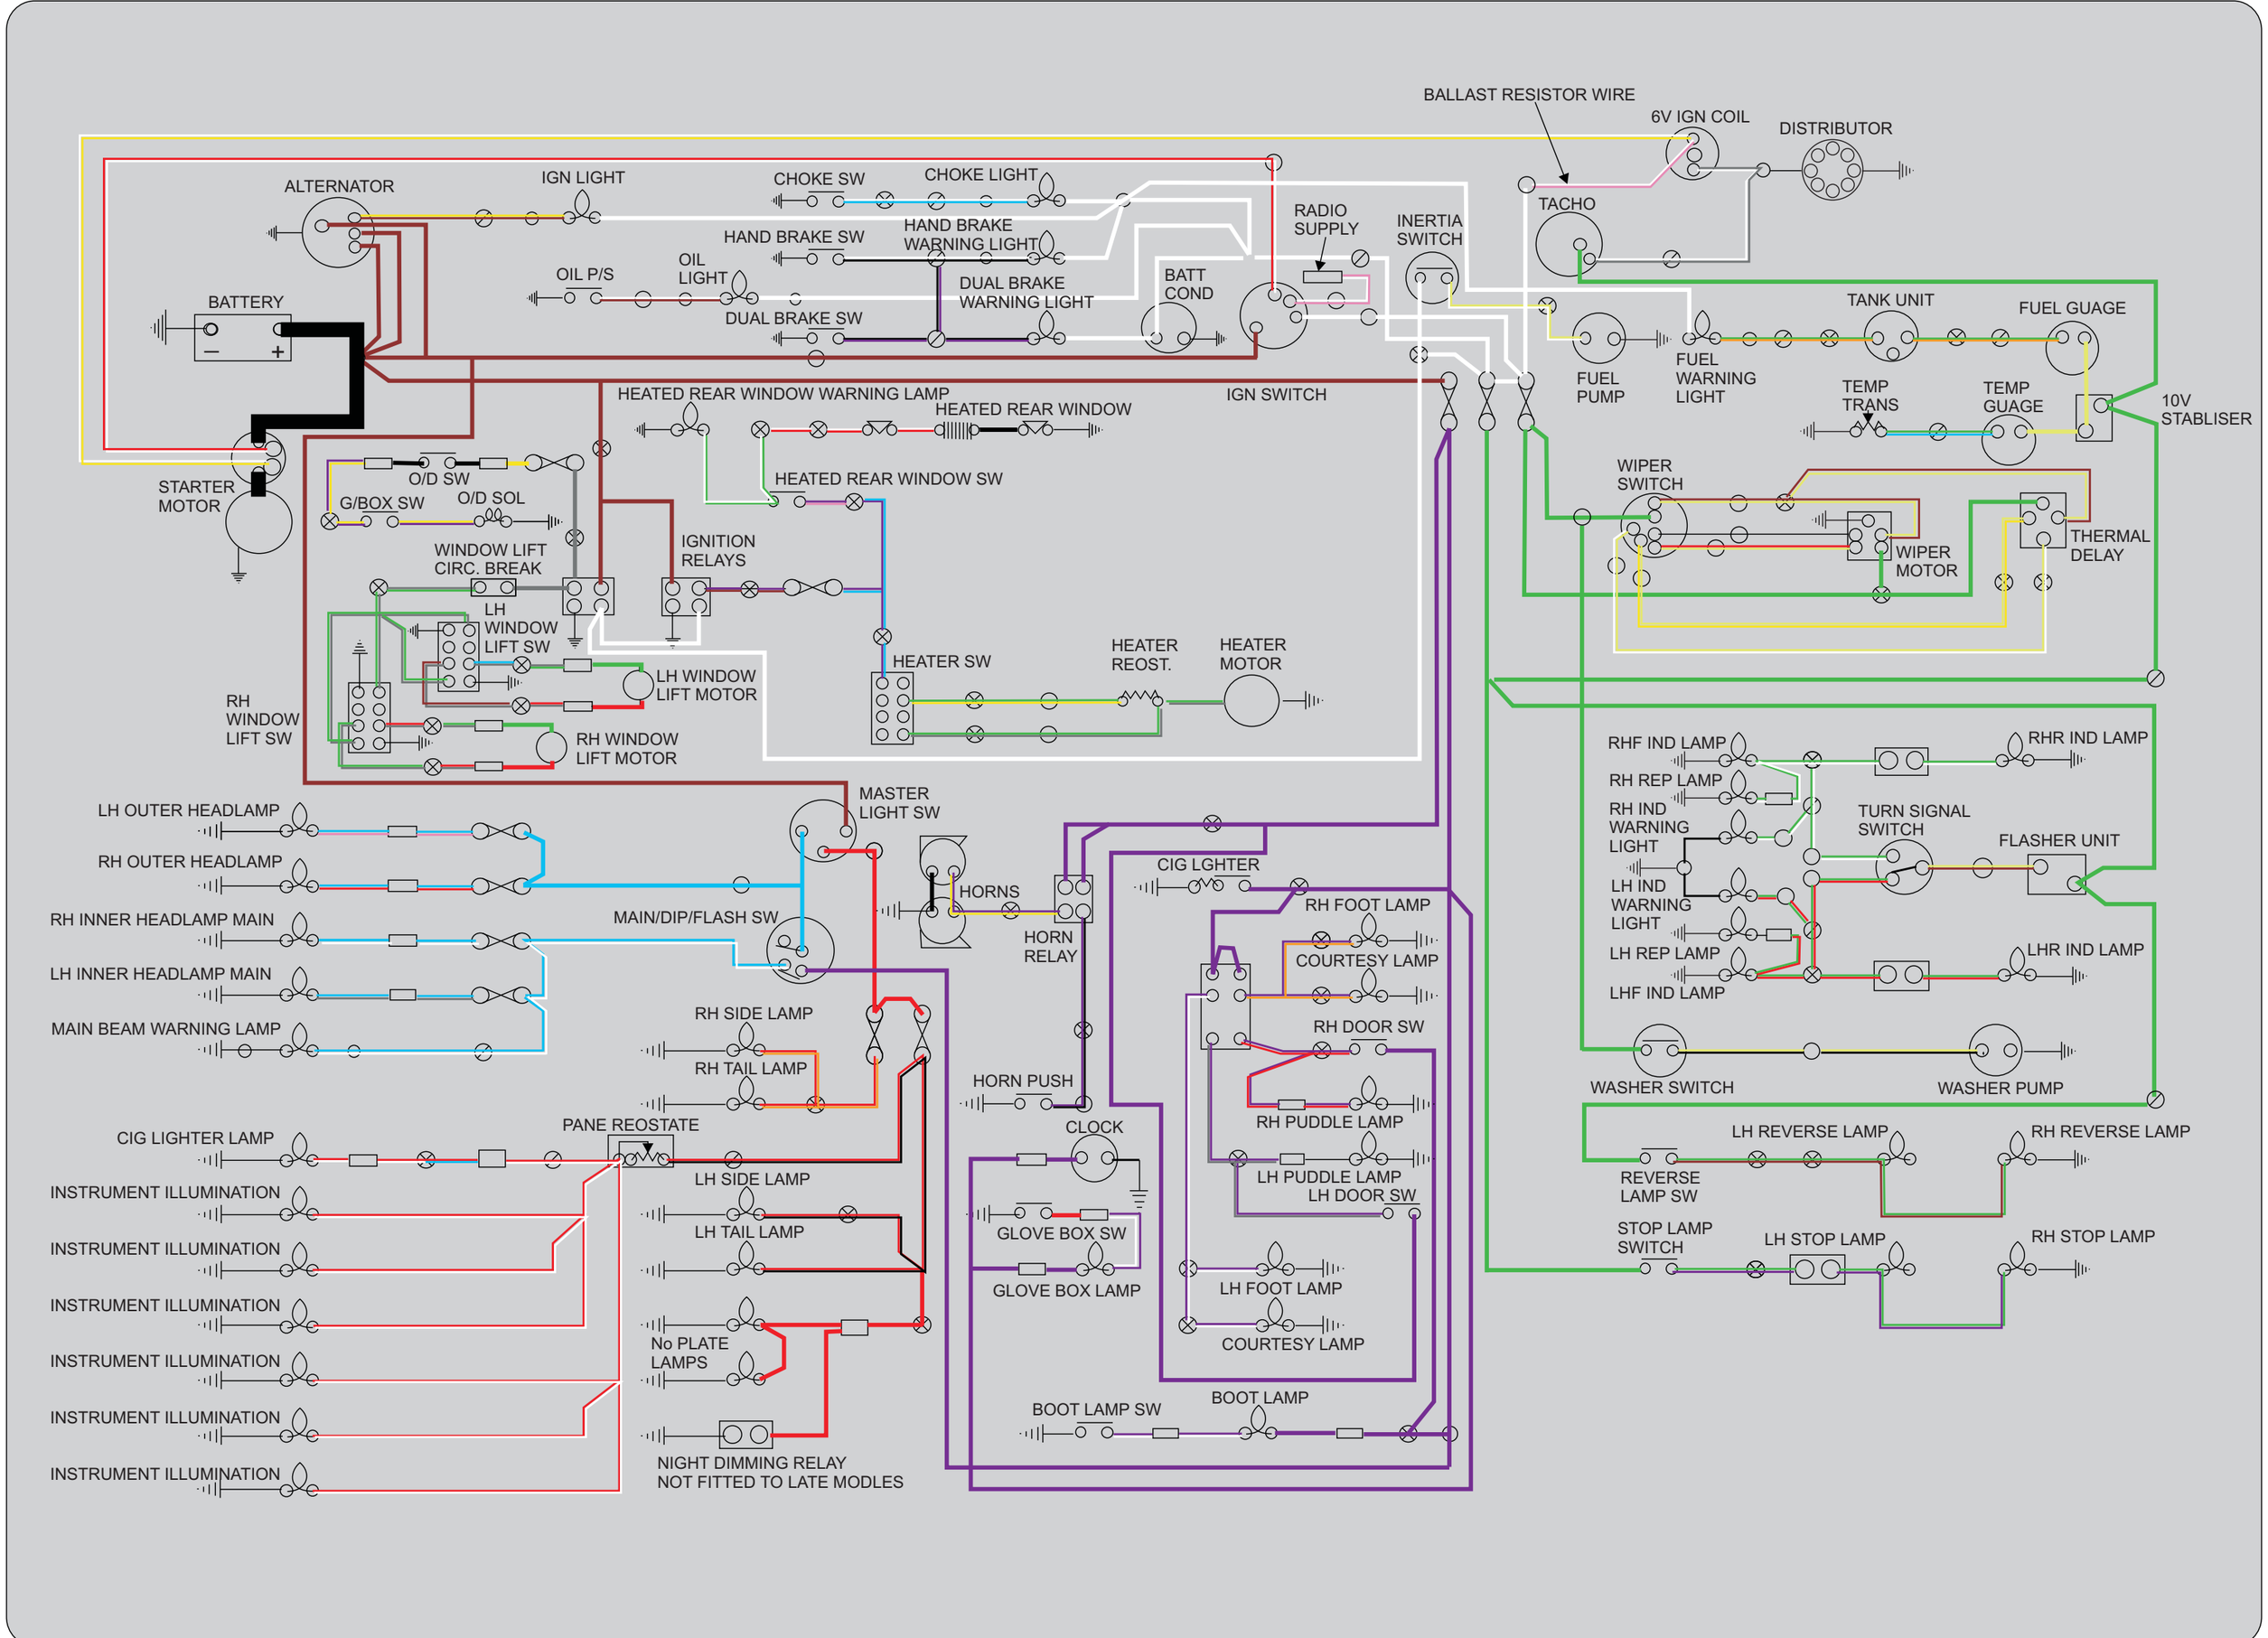
BALLAST RESISTOR WIRE
6V IGN COIL
DISTRIBUTOR
ALTERNATOR
IGN LIGHT
CHOKE SW
CHOKE LIGHT
HAND BRAKE SW
HAND BRAKE WARNING LIGHT
OIL P/S
OIL LIGHT
DUAL BRAKE WARNING LIGHT
DUAL BRAKE SW
BATT COND
RADIO SUPPLY
INERTIA SWITCH
TACHO
BATTERY
TANK UNIT
FUEL GUAGE
FUEL PUMP
FUEL WARNING LIGHT
TEMP TRANS
TEMP GUAGE
10V STABLISER
HEATED REAR WINDOW WARNING LAMP
HEATED REAR WINDOW
IGN SWITCH
HEATED REAR WINDOW SW
STARTER MOTOR
O/D SW
G/BOX SW
O/D SOL
WINDOW LIFT CIRC. BREAK
IGNITION RELAYS
WIPER SWITCH
WIPER MOTOR
THERMAL DELAY
LH WINDOW LIFT SW
LH WINDOW LIFT MOTOR
HEATER SW
HEATER REOST.
HEATER MOTOR
RH WINDOW LIFT SW
RH WINDOW LIFT MOTOR
RHF IND LAMP
RHR IND LAMP
RH REP LAMP
RH IND WARNING LIGHT
TURN SIGNAL SWITCH
FLASHER UNIT
LH IND WARNING LIGHT
LH REP LAMP
LHR IND LAMP
LHF IND LAMP
LH OUTER HEADLAMP
MASTER LIGHT SW
RH OUTER HEADLAMP
HORNS
CIG LGHTER
RH INNER HEADLAMP MAIN
MAIN/DIP/FLASH SW
HORN RELAY
RH FOOT LAMP
COURTESY LAMP
LH INNER HEADLAMP MAIN
RH DOOR SW
MAIN BEAM WARNING LAMP
RH SIDE LAMP
RH TAIL LAMP
HORN PUSH
WASHER SWITCH
WASHER PUMP
RH PUDDLE LAMP
CIG LIGHTER LAMP
PANE REOSTATE
CLOCK
LH REVERSE LAMP
RH REVERSE LAMP
REVERSE LAMP SW
LH PUDDLE LAMP
LH DOOR SW
LH SIDE LAMP
INSTRUMENT ILLUMINATION
GLOVE BOX SW
LH TAIL LAMP
STOP LAMP SWITCH
LH STOP LAMP
RH STOP LAMP
GLOVE BOX LAMP
LH FOOT LAMP
No PLATE LAMPS
COURTESY LAMP
BOOT LAMP SW
BOOT LAMP
NIGHT DIMMING RELAY NOT FITTED TO LATE MODLES